

## RJPLD Tester

### Take off test:

1. Plug tester into one side of RJPLD, taking care to properly align plugs (the tester only plugs in one way)
2. Turn on tester. If the RJPLD signal on the tester stays lit, move RJPLD Polarity switch to the other position.
3. Hit front of top surface of RJPLD. A quick flash of the RJPLD signal on the tester indicates the RJPLD is working properly.



### Speedlight test:

1. With tester plugged into RJPLD and turned on, move speedlight switch on tester to Test 1. The speedlights and deckside light on the RJPLD will light.
2. Move speedlight switch on tester to Test 2. Again, speedlights and deckside light on the RJPLD will light.

### Other connector block:

Repeat these tests for the other connector block. Note: the tester must be plugged in upside down on one connector block for the plugs to align properly, and you'll have to look underneath to see the RJPLD signal light.



If your RJPLD does not pass these tests, take the following steps:

- Check cable prongs and connector receptacles for corrosion and clean as necessary.
- Check battery in RJPLD tester, and recharge or replace if necessary. The RJPLD tester uses a standard 9-volt battery. Slide the battery cover off, change the battery, and replace the cover.

After cleaning and checking battery, repeat tests. If your RJPLD still does not pass these tests, contact CTS customer service by email at [customerservice@coloradotime.com](mailto:customerservice@coloradotime.com), or by phone at +1 970-667-1000 x256