

Flat Brackets for Gutter Hung Touchpads Installation Instructions

Tools needed


- Hammer drill
- 3/8" masonry drill bit
- Anchor setting tool (supplied)
- 5/32 hex key (supplied)
- Sharpie or other marker

To install anchors


Using the brackets as a template, mark holes where the anchors should go:

- 1) Attach the brackets to a touchpad, centering the bracket on the Velcro.
- 2) Hold the touchpad in place in the pool, aligning the target on the touchpad with the target on the pool wall
- 3) Carefully remove the touchpad while keeping the bracket in place.
- 4) Mark the hole locations on the deck.


Drill and install anchors as shown below:

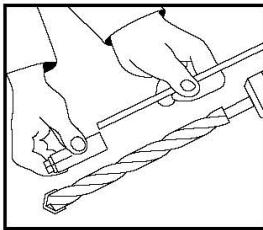


1. Adjust depth gauge so that anchor will be flush with the concrete surface when installed.

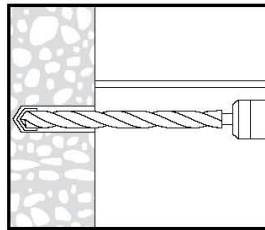

2. Hammer drill hole.

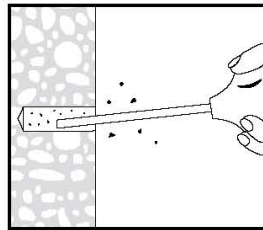

3. Clean hole.

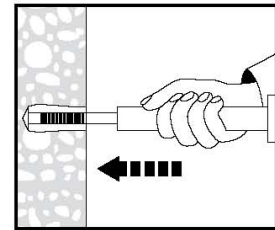

4. Install anchor using proper setting tool. Setting tool to be driven into anchor until setting tool shoulder meets top of anchor.

To install touchpads:

- 1) Install brackets with Velcro side up, using supplied 1/2" screws (1/4x20) into the anchors you put in the deck in the previous step, tightening them with the 5/32 hex key (supplied).
- 2) Set pads on brackets, aligning the target on the touchpad with the target on the pool wall.

To remove touchpads:

- 1) Remove touchpads from brackets and store safely on caddy not in direct sunlight. See your Touchpad user manual for more details.
- 2) Using 5/32 hex key (supplied), unscrew bolts and remove brackets. Store brackets in a dry, safe place. Store bolts in a safe place, or re-install into anchors in deck to help keep debris out.