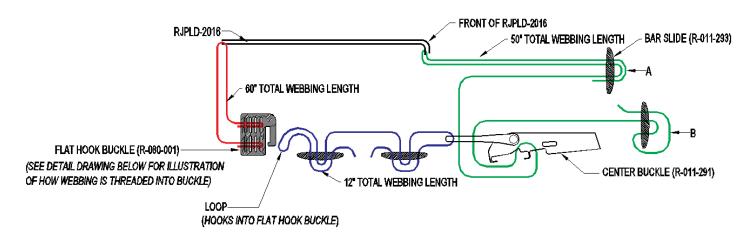


Relay Judging Platform (RJPLD-2016) Strap Adjustment Instructions

Thank you for purchasing a relay judging platform (RJPLD-2016) for use with OSB11 and OSB12 starting blocks. This instruction sheet will help you understand how the straps are assembled.

Parts: You should have received all the parts shown in Figure 1, which shows one of the strap assemblies (each RJP has two). The RJP is shipped with the straps fully assembled. Use this diagram to feed the straps through the proper fasteners if needed. If you are missing any parts or have questions, please email our customer service department at customerservice@coloradotime.com or call 800-287-0653 or 970-667-1000 ext. 256.



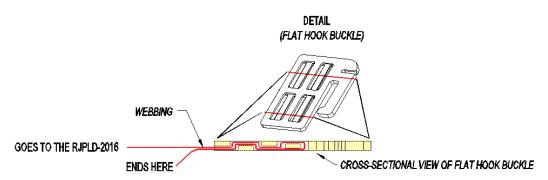


Figure 1 - Assembled RJPLD-2016 with mounting strap

Strap Adjustment Instructions

When you receive a new RJP, you must adjust the straps to fit your starting platform.

- 1. Open the strap assembly by sliding the loop part of the strap out of the hook part of the flat hook buckle.
- 2. Place the RJP on the starting platform with the front of the RJP (the part with the bend and speedlights) hanging over the front end of the block.
- **3.** Slide the clear plastic threader through the opening between the block surface and the footrest, and then pull the flat hook buckle and strap through.
- **3.** Adjust the fastener at the position marked "A" on the strap leading from the front of the RJP to allow the strap underneath the block to reattach to the hook part of the flat buckle.
- **4.** Attach the loop part of the strap to the hook part of the flat buckle.
- 5. Pull on the strap at the position marked "B," to tighten the strap assembly.
- 6. Flip the center buckle to secure the RJP in place.

Note: After the initial setup to fit the RJP to your starting platform, you should not need to re-adjust the fasteners at the point marked "A." You will only need to attach the strap to the hook part of the flat buckle, tighten the strap by pulling on the position marked "B," then secure by flipping the center buckle in place.

To lengthen the life of your RJP and straps, do not leave the RJP strapped to your starting platform while not in use.

Phone: 970-667-1000 ext. 256 Fax: 970-667-1032 Toll Free: 800-287-0653 ext. 256

www.coloradotime.com